

# VX 900 SERIES

ENTER FACTORY  
PROGRAMMING  
CODE

ENTER  
PROGRAMMING  
CODE

4 TO 8 DIGITS

8 x 1 (1 1 1 1 1 1 1 1)  
PRESS ENTER

RED LED WILL BE ON

ENTER NEW  
PROGRAMMING  
CODE

4 TO 8 DIGITS

PRESS ENTER



ENTER USER  
NUMBER

2 DIGITS (1 TO 62)

PRESS ENTER



ENTER USER  
CODE

4 TO 8 DIGITS. CODE MUST BE  
PREFIXED WITH RELAY NUMBER:  
1=RELAY 1; 2=RELAY 2; 0=BOTH

TO DELETE USER  
CODE PRESS CLEAR

PRESS ENTER



MORE CODES  
REQUIRED?

YES

NO

PRESS ENTER  
TWICE



ENTER RELAY  
1 TIME

2 DIGITS (01-99)

00 = LATCHING CONTACT

PRESS ENTER



ENTER RELAY  
2 TIME

2 DIGITS (01-99)

PRESS ENTER




PRESS ENTER  
TWICE



SYSTEM  
READY TO USE

RED LED WILL GO OUT

 = MELODY